


Profesionální český instalační návod

ILLUMINATED CABINET INSTALLATION INSTRUCTIONS


MC-CR6070


MC-CR8070



MC-CR1070

Please read these instructions carefully before installation.
Installation should be carried out by a qualified electrician.
Please leave a copy for the user/maintenance engineer for future reference.

GENERAL

- THIS PRODUCT MUST BE EARTHED. IF THERE ARE ONLY TWO WIRES COMING FROM YOUR POWER SUPPLY IT MEANS THAT THIS FITTING BE WIRED TO AN UNEARTHED CIRCUIT. CONTACT A QUALIFIED ELECTRICIAN TO INSTALL A SUITABLE EARTH FACILITY.
- ENSURE ELECTRICITY IS SWITCHED OFF AT THE MAINS BEFORE INSTALLING OF MAINTAINING ANY ELECTRICAL PRODUCT.
- THIS PRODUCT IS FOR IN DOOR USE ONLY.
- THIS PRODUCT IS IP44 RATED AND SHOULD BE INSTALLED ONLY.
- IN THE ZONE 2 AND 3 OF THE BATHROOM AS DEFINED BY THE IEE WIRING REGULATIONS (SEE DIAGRAM BELOW)
- REPLACE FAILED LAMPS IMMEDIATELY. ALLOW THE GLASS, LAMP AND FITTING TO COOL BEFORE REPLACING THE LAMP.

IEE Bathroom Zones Diagram

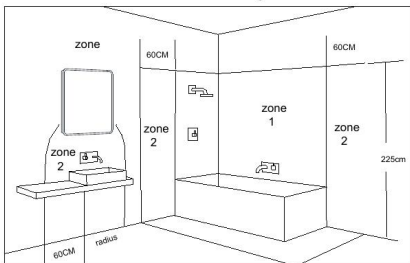

OUTSIDE ZONES

IMPORTANT

- When working at heights, please use a suitable platform to work from.
- **Please note:** For new installations, check for any electrical cables or pipe work (gas/water) in the vicinity of the intended mounting point for the product, before proceeding with the installation.
- Ensure that the fixing location is able to take the weight of the complete fitting. Wear suitable eye protection when drilling. Be careful when using power tools near water.

Do NOT strike mirror glass with hard or pointed items. It is recommended that the product is cleaned with a soft, dry, non abrasive cloth. Do NOT use cleaning agents or abrasive materials on any type of finished surface. Do NOT allow moisture to come into contact with the electrical components.

Compliance
This product complies with the following safety standards:
BS EN 60598-1: 2009+A11: 2009, EN60598-2-1: 1989

Wiring
This product is manufactured to class I category and requires an earth connection

COLOUR CODING:
L - Live = Brown
N - Neutral = Blue
⊕ - Earth = Green & Yellow

INSTALAČNÍ NÁVOD – LED ZRCADLOVÁ SKŘÍŇKA

OBEČNÉ INFORMACE

Před instalací si pečlivě přečtěte tento návod. Instalaci musí provádět kvalifikovaný elektrikář. Výrobek musí být uzemněn. Před instalací vždy vypněte elektrické napájení. Výrobek je určen pouze pro vnitřní použití a splňuje krytí IP44.

BEZPEČNOSTNÍ POKYNY

- Nepoužívejte agresivní čisticí prostředky.
- Chraňte elektrické části před vlhkostí.
- Při vrtání používejte ochranné pomůcky.
- Zkontrolujte, že stěna unese hmotnost skříňky.

ZAPOJENÍ

L – Fáze = Hnědá

N – Nulový vodič = Modrá


PE – Zemnění = Zeleno/žlutá

Modely: MC-CR6070 / MC-CR8070 / MC-CR1070


ILLUMINATED CABINET INSTALLATION INSTRUCTIONS

Installation procedure

1. Open the carton and make sure all the parts listed below are present

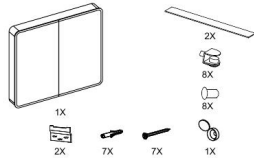


2. Mark a desired height of the mirror and draw a horizontal line on the wall which corresponds with the height of the cabinet hangers. Drill the required holes and insert the wall plugs. Note: Wall plugs supplied are only suitable for solid stone/brick walls. Then screw the brackets to the wall using the screws provided. Please ensure the screws are fully tight.

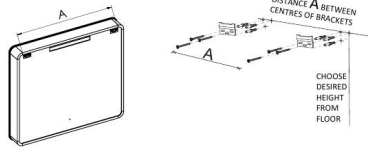


3. Make the electrical connections, make sure to turn off the electrical supply at the mains. Connection must be made in accordance with the latest IEE regulations. This cabinet is manufactured to Class I and requires an earth connection


4. Hang the cabinet on the cleats and check level, adjust horizontally to desired location. (This may require two people)

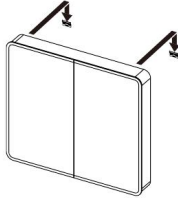


5. Then secure the base of the cabinet to the wall with provided screw and over-cap.

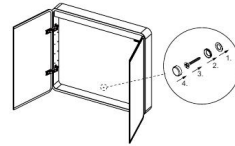


6. Install clamps to hold the glass shelf, and install the shelf.

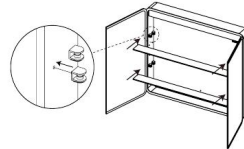

7. Secure the position of the glass shelf.

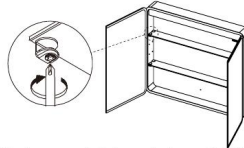

8. If the doors are out of alignment, please adjust the screws 1, 2 and 3 on hinges for 3 directional adjustment, see below diagram.



POSTUP INSTALACE

1. Otevřete balení a zkontrolujte kompletnost všech dílů.
2. Označte výšku instalace, vyvrtejte otvory a upevněte držáky.
3. Provedte elektrické zapojení dle platných norem.
4. Zavěste skříňku na držáky a vyrovnejte ji.
5. Připevněte spodní část skříňky ke stěně.
6. Namontujte držáky polic a vložte skleněné police.
7. Zajistěte správnou polohu polic.
8. V případě potřeby upravte panty dvířek pomocí nastavovacích šroubů.